ZETTLER DISPLAYS

SPECIFICATIONS FOR LIQUID CRYSTAL DISPLAY

	CUSTOMER A	APPROVAL	
※ P	ART NO. : ATM0241D1	(ZETTLER DISP)	LAYS) SPEC V1.3
APPROVAL		COMPANY CHOP	
CUSTOMER COMMENTS			

ZETTLER DISPLAYS ENGINEERING APPROVAL					
DESIGNED BY	CHECKED BY	APPROVED BY			
Irene	XW	GZH			

REVISION RECORD

REVISION REC	REVISION DATE	PAGE	CONTENTS
V1.0	2024-10-25		PRELIMINARY
V1.1	2024-12-23	11,12	UPDATE PRECAUTION
V1.2	2025-03-06	3,13	UPDATE GENERAL SPECIFICATIONS AND MECHANICAL DRAWING
V1.3	2025-03-14	6	ADD LED FORWARD CURRENT DESCRIPTION

***** CONTENTS

- 1. GENERAL SPECIFICATIONS
- 2. PIN ASSIGNMENT
- 3. OPERATING SPECIFICATIONS
- 4. OPTICAL SPECIFICATIONS
- 5. RELIABILITY TEST
- 6. PRECAUTION FOR USING LCM
- 7. MECHANICAL DRAWING
- 8. PACKAGE DRAWING
- 9. INSPECTION SPECIFICATION

1. GENERAL SPECIFICATIONS

Item	Specification	Remark
1. LCD size	2.41 inch(Diagonal)	
2. Driver element	a-Si TFT active matrix	
3. Resolution	480x(RGB)x640	
4. Display mode	Normally Black, IPS, Transmissive	
5. Dot Pitch (W*H)	0.051mm(W) x 0.153mm(H)	
6. Pixel pitch(W*H)	0.153mm(W) x 0.153mm(H)	
7. Active Area(W*H)	36.72mm(W) x 48.96mm(H)	
8. Module size (W*H)	41.72mm(W) x 57.06mm(H) x 2.2mm(D)	Note 1
9. Surface treatment	Clear	
10. Color arrangement	RGB-stripe	
11. Color	262K	
12. Viewing angle	L/R/U/D: 80/80/80/80	
13. Interface	18 bit RGB interface	
14. LCD controller	ST7701SN	
15. LCM Brightness	800 cd/m2 Min.	
16. Backlight driving condition	40mA @11.2~13.2V	
17. Touch panel	N.A	
18. Touch controller	N.A.	
19 Operation Temperature	-20~70 °C	
20. Weight	T.B.D.	
21. RoHS/REACH	RoHS/REACH compliant	

Note 1: Please refer to mechanical drawing.

2. PIN ASSIGNMENT

TFT LCD Panel Driving Section

FPC Connector is used for the module electronics interface. The recommended model is

"Hirose: FH26W-39S-0.3SHW(60)" manufactured by Hirose or other compatible connectors.

Pin No.	Symbol	Function	Level	Note
1	LEDA	Backlight anode	Р	
2	LEDK	Backlight cathode	Р	
3	GND	Ground	Р	
4	SDA	Serial data input pin for SPI Interface.	I	
5	SCL	Display data/command selection pin in parallel interface. This pin is used to be serial interface clock.	I	
6	CS	Chip select	I	
7	RESET	The external reset input		
8~25	DB17~DB0	data bus	I/O	
26	DE	Data enable signal for RGB interface operation		
27	DCLK	Sample clock	I	
28	HSYNC	Horizontal sync input		
29	VSYNC	Vertical sync input	I	
30~31	GND	Ground	Р	
32	VCC	Power for digital circuit	Р	
33~34	GND	Ground	Р	
35	YU/NC	N.A	-	
36	XL/NC	N.A	-	
37	YD/NC	N.A	-	
38	XR/NC	N.A	-	
39	GND	Ground	Р	

I: input, O: output, P: Power

3. Operating Specification

3.1 ABSOLUTE MAXIMUM RATINGS

Item			ues	- Unit	Remark
item	Symbol	Min.	Max.	- Ollit	Remark
Power Voltage	VCC/IOVCC	-0.3	4.6	V	
Operation Temperature	T _{OP}	-20	70	°C	
Storage Temperature	T _{ST}	-30	80	°C	
LED Reverse Voltage	V _R	-	1.2	V	Each LED Note 2
LED Forward Current	I _F		25	mA	Each LED

Note 1: The absolute maximum rating values of this product are not allowed to be exceeded at any times. Should a module be used with any of the absolute maximum ratings exceeded, the characteristics of the module may not be recovered, or in an extreme case, the module may be permanently destroyed.

Note 2: V_R Conditions: Zener Diode 20mA

3.2 Typical Operation Conditions

Itom	Symbol	Values			Unit	Remark
ltem	Symbol	Min.	Тур.	Max.	Onit	Keillalk
Operating voltage	VCC	2.5	2.8	3.3	V	
Input Logic High Voltage	V _{IH}	0.7VCC		VCC	V	
Input Logic Low Voltage	V _{IL}	Vss		0.3VCC	V	
Operating current	ILom		49.40		mA	VCC=2.8V I _L =40mA

3.3 Backlight driving conditions

Item	Symbol	Values			Unit	Remark
ll item	Symbol	Min.	Тур.	Max.	Oilit	Keillaik
Voltage for LED Backlight	V _L	11.2	12	13.2	V	Note 1
Current for LED Backlight	Ι _L		40		mA	Note 3
LED life time		30000			Hr	Note 2

Note 1: The LED Supply Voltage is defined by the number of LED at Ta=25 $^{\circ}$ C and I_L =40mA.

Note 2: The "LED life time" is defined as the module brightness decrease to 50% original brightness at Ta=25°C and I_I =40mA.

Note 3: The forward current decreases automatically above 30°C to prevent overheating and ensure long-term reliability of the device.

Forward current VS. Ambient temperature


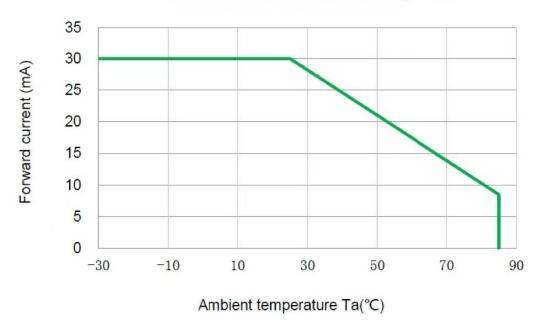


Figure 3.1 Forward current vs. ambient temperature characteristics.

3.4 Timing Characteristics

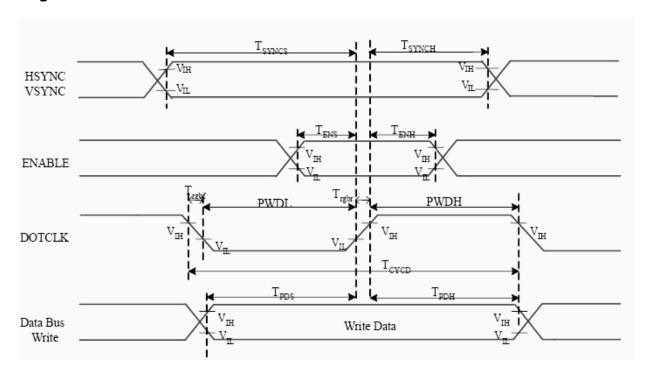

VDDI=1.8, VDD=2.8, AGND=DGND=0V, Ta=25 ℃

Signal	Symbol	Parameter	MIN	MAX	Unit	Description
HSYNC,	Т	VSYNC, HSYNC Setup Time	5		ne	
VSYNC	Tsyncs	VSTNC, HSTNC Setup Time	5	,	ns	
ENABLE	T _{ENS}	Enable Setup Time	5	-	ns	
ENABLE	TENH	Enable Hold Time	5	-	ns	
	PWDH	DOTCLK High-level Pulse Width	15	1	ns	
DOTCLK	PWDL	DOTCLK Low-level Pulse Width	15	1	ns	
DOTCER	TCYCD	DOTCLK Cycle Time	33	-	ns	
	Trghr, Trghf	DOTCLK Rise/Fall time	-	15	ns	
DB	TPDS	PD Data Setup Time	5	-	ns	
DB	T _{PDH}	PD Data Hold Time	5	-	ns	

4.0 OPTICAL SPECIFICATIONS

Item	Symbol Condition –		Values			Unit	Remar
item	Syllibol	Condition	Min.	Тур.	Max.	Oilit	k
	θ_{L}	Φ=180°(9 O'CLOCK)		80			
Viewing Angle	θ_{R}	Φ=0°(3 O'CLOCK) 80		dograd	Note 1		
(CR ≥10)	θ_{T}	Φ=90°(12 O'CLOCK)	K) 80 degr	degree	Note i		
	θ_{B}	Φ=270°(6 O'CLOCK)		80			
Response Time	T _{ON +} T _{OFF}			35	40	msec	Note 3
Contrast Ratio	CR		800	1000			Note 4
	W _X	Normal	0.287	0.302	0.317		Note 2
Color Chromaticity	W _Y	Θ=Φ=0°	0.314	0.329	0.344		Note 5
	VVY	Θ=Φ=0°	0.314	0.329	0.344		Note 6
Luminance	L		800	900		cd/m ²	Note 6
Luminance Uniformity	YU		80			%	Note 7

Test Conditions:

- 1. IL=40mA (Backlight current), the ambient temperature is 25°C. 2. The test systems refer to Note 2.

Note 1: Definition of viewing angle range

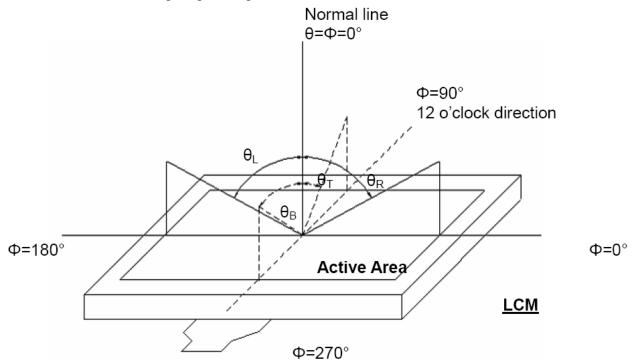


Figure 4.1 Definition of viewing angle.

ZETTLER DISPLAYS

Note 2: Definition of optical measurement system.

The optical characteristics should be measured in dark room. After 30 minutes operation, the optical properties are measured at the center point of the LCD screen. (Response time is measured by Photo detector TOPCON

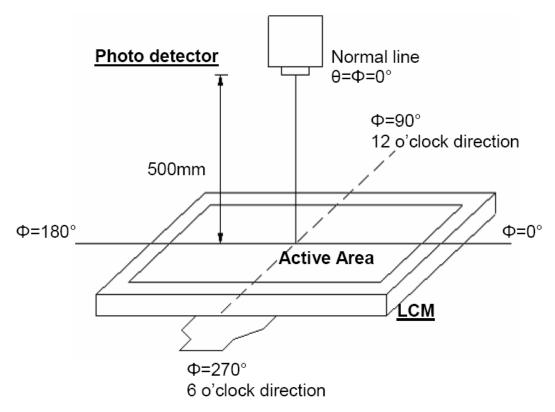


Figure 4.2 Optical measurement system setup

Note 3: Definition of Response time

The response time is defined as the LCD optical switching time interval between "White" state and "Black" state. Rise time (TON) is the time between photo detector output intensity changed from 90% to 10%. And fall time (TOFF) is the time between photo detector output intensity changed from 10% to 90%.

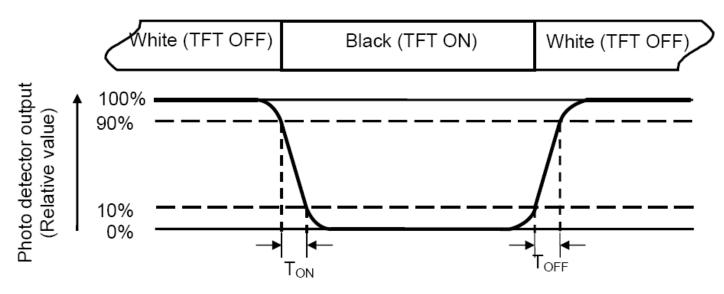


Figure 4.3 Definition of response.

Note 4: Definition of contrast ratio

 $Contrast \ ratio(CR) = \frac{Luminance \ measured \ when \ LCD \ on \ the \ "white" \ state}{Luminance \ measured \ when \ LCD \ on \ the \ "black" \ state}$

Note 5: Definition of color chromaticity (CIE1931)

Color coordinates measured at center point of LCD.

Note 6: All input terminals LCD panel must be ground while measuring the center area of the panel. The LED driving condition is I_L =30mA.

Note 7: Definition of Luminance Uniformity

Active area is divided into 5 measuring areas (Refer to Fig. 4-4). Every measuring point is placed at the center of each measuring area.

Luminance Uniformity (Yu) =
$$\frac{B_{min}}{B_{max}}$$

L-----Active area length W----- Active area width

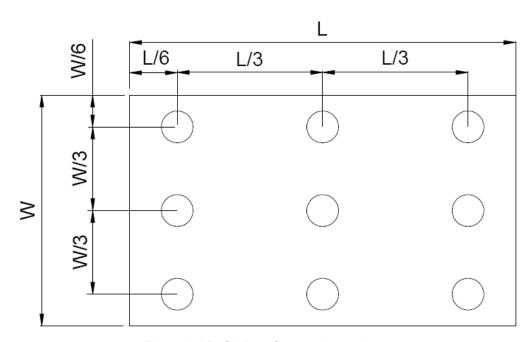


Figure 4.4 Definition of measuring points.

Bmax: The measured maximum luminance of all measurement position. Bmin: The measured minimum luminance of all measurement position.

ZETTLER DISPLAYS

5. RELIABILITY TEST

Item	Test Condition Item	Remark
High temperature storage	Ta= 80 °C 240hrs	Note 1 Note 4
Low temperature storage	Ta=-30 °C 240hrs	Note 1 Note 4
High temperature operation	Ts= 70 °C 240hrs	Note 2 Note 4
Low temperature operation	Ts=-20 °C 240hrs	Note 1 Note 4
High temperature/High humidity operation	90% RH 60°C 240hrs	Note 4
Thermal Shock	-20°C/30 min ~ +70°C/30 min for a total 10 cycles, Start with cold temperature and end with high temperature.	Note 4
Vibration test	Freq:10~55~10Hz Amplitude:0.75mm 30min for each direction of X,Y,Z (1.5 hours for total)	
Package drop test	Height:60 cm 1 corner, 3 edges, 6 surfaces	
Electro static discharge	R: 330 \(\Omega\) C:150pF Air discharge: +/-12K Contact discharge: +/-8K	Note 5

- Note 1: Ta is the ambient temperature of samples.
- Note 2: Ts is the temperature of panel's surface.
- **Note 3**: In the standard condition, there shall be no practical problem that may affect the display function. After the reliability test, the product only guarantees operation, but don't guarantee all of the cosmetic specification.
- **Note 4**: Before cosmetic and function test, the product must have enough recovery time, at least 2 hours at room temperature.
- Note 5: Sample quantity no less than 3 pcs. Discharge no less than 5 times.
 - Air discharge on surface of LCM or other area without metal material
 - Contact discharge on bezel. For those without bezel, this test is not applicable
 - If the LCM is working abnormally during test but can recover after reset or after 2 hours recovery, the LCM is considered OK.

6. PRECAUTION FOR USING LCM

- 1. When design the product with this LCD Module, make sure the viewing angle matches to its purpose of usage.
- 2. As LCD panel is made of glass substrate, dropping the LCD module or banging it against hard objects may cause cracking or fragmentation. Especially at corners and edges.
- 3. Although the polarizer of this LCD Module has the anti-glare coating, always be careful not to scratch its surface. Use of a plastic cover is recommended to protect the surface of polarizer.
- 4. If the LCD module is stored below specified temperature, the LC material may freeze and be deteriorated. If it is stored above specified temperature, the molecular orientation of the LC material may change to Liquid state and it may not revert to its original state. And also excessive temperature and humidity could cause polarizer peel off or bubble. Therefore, the LCD module should always be stored within specified temperature and humidity range. If the LCD modules will be stored for a long time, the recommend temperature/humidity for the storage environment is:

Temperature : 15°C ~ 35°C / Relatively humidity: ≤80%

- 5. Meanwhile please follow other requirements below for storage:
 - -Store with no touch on display surface by the anything else. If possible, store the LCD in the packaging situation when it was delivered.
 - -If the original package is opened, please store in an anti-static polyethylene bag and seal it so as not to get fresh air outside enter into it.
 - LCD modules shall be stored in a dark place. And it shall not be exposed to sunlight nor fluorescent light in storage.

Note: If the storage time is over 1 year, the golden fingers of FPC might be slightly oxidized, but it won't affect the electrical performance, customer can use rubber to clean the golden fingers before assembly or directly assemble the display.

6. Saliva or water droplets must be wiped off immediately as those may leave stains or cause color changes if is remained there for a long time. And water vapor will cause corrosion of ITO electrodes.

If the surface of LCD panel needs to be cleaned, wipe it swiftly with cotton or other soft dry cloth. If it is not still clean enough, blow a breath on the surface and wipe again.

If needed, please just moisten cloth with one of the following solvents:

- Isopropyl alcohol
- Ethyl alcohol

Solvents other than those mentioned above may damage the polarizer. Especially, do not use the following:

- Water
- Ketone
- Aromatic solvents
- 7. The module should be driven according to the specified ratings to avoid malfunction and permanent damage. Applying DC voltage cause a rapid deterioration of LC material. Make sure to apply alternating waveform by continuous application of the M signal. Especially the power ON/OFF sequence should be kept to avoid latch-up of driver LSIs and DC charge up to LCD panel.
- 8. Mechanical Considerations
 - a) LCM are assembled and adjusted with a high degree of precision. Avoid excessive shocks and do not make any alterations or modifications. The following should be noted.
 - b) Do not tamper in any way with the tabs on the metal frame.
 - c) Do not modify the PCB by drilling extra holes, changing its outline, moving its components or modifying its pattern.
- 9. Static Electricity
 - a) Operator

Wear the electrostatics shielded clothes because human body may be statically charged if not ware shielded clothes. Never touch any of the conductive parts such as the LSI pads; the copper leads on the PCB and the interface terminals with any parts of the human body.

b) Equipment

There is a possibility that the static electricity is charged to the equipment, which has a function of peeling or friction action (ex: conveyer, soldering iron, working table). Earth the equipment through proper resistance (electrostatic earth: 1x10⁸ ohm).

Only properly grounded soldering irons should be used.

If an electric screwdriver is used, it should be well grounded and shielded from commutator sparks.

The normal static prevention measures should be observed for work clothes and working benches; for the latter conductive (rubber) mat is recommended.

c) Floor

Floor is the important part to drain static electricity, which is generated by operators or equipment.

There is a possibility that charged static electricity is not properly drained in case of insulating floor. Set the electrostatic earth (electrostatic earth: 1x10⁸ ohm).

d) Humidity

Proper humidity helps in reducing the chance of generating electrostatic charges. Humidity should be kept between 50%RH and 80%RH.

e) Transportation/storage

The storage materials also need to be anti-static treated because there is a possibility that the human body or storage materials such as containers may be statically charged by friction or peeling.

The modules should be kept in antistatic bags or other containers resistant to static for storage.

f) Soldering

Soldering anything to this TFT display would void the warranty.

g) Others


The laminator (protective film) is attached on the surface of LCD panel to prevent it from scratches or stains. It should be peeled off slowly using static eliminator.

Static eliminator should also be installed to the workbench to prevent LCD module from static charge.

- 10. Operation
 - Driving voltage should be kept within specified range; excess voltage shortens display life.
 - b) Response time increases with decrease in temperature.
 - c) Display may turn black or dark blue at temperatures above its operational range; this is (however not pressing on the viewing area) may cause the segments to appear "fractured".
 - d) Mechanical disturbance during operation (such as pressing on the viewing area) may cause the segments to appear "fractured".
- 11. If any fluid leaks out of a damaged glass cell, wash off any human part that comes into contact with soap and water.

 The toxicity is extremely low but caution should be exercised at all the time.
- 12. Disassembling the LCD module can cause permanent damage and it should be strictly avoided.
- 13. LCD retains the display pattern when it is applied for long time (Image retention). To prevent image retention, do not apply the fixed pattern for a long time. Image retention is not a deterioration of LCD. It will be removed after display pattern is changed.
- 14. Do not use any materials, which emit gas from epoxy resin (hardener for amine) and silicone adhesive agent (dealcohol or deoxym) to prevent discoloration of polarizer due to gas.
- 15. Avoid the exposure of the module to the direct sunlight or strong ultraviolet light for a long time.

7. MECHANICAL DRAWING

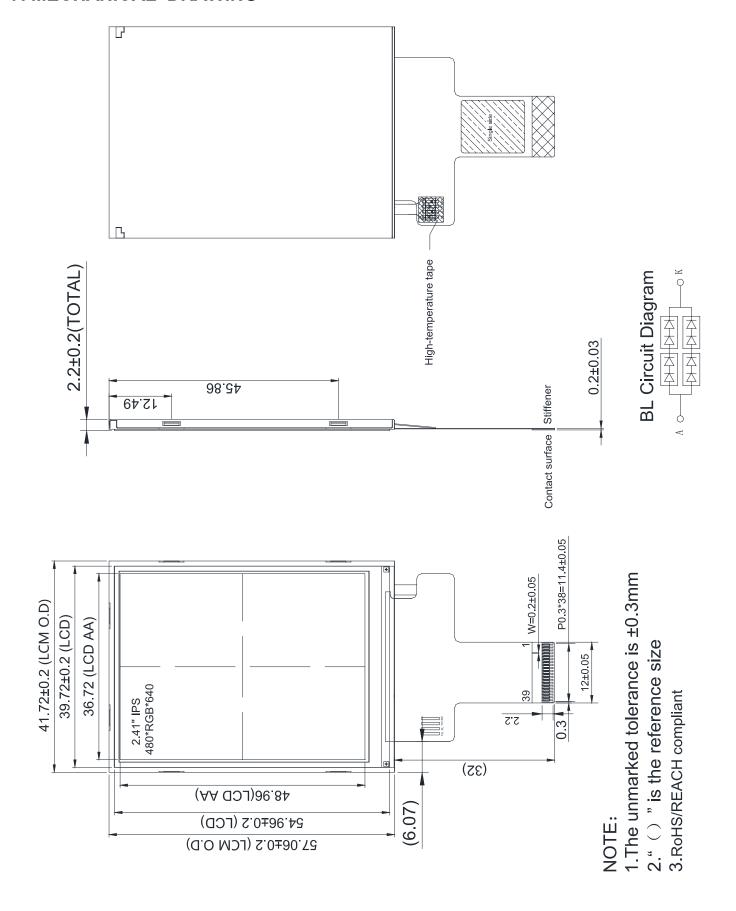

ZETTLER DISPLAYS

8. PACKAGE DRAWING T.B.D.

7. INSPECTION SPECIFICATION

1.SCOPE SPECIFICATIONS CONTAIN

- 1.1 DISPLAY QUALITY EVALUATION
- 1.2 MECHANICS SPECIFICATION

2.SAMPLING PLAN

UNLESS THERE IS OTHER AGREEMENT, THE SAMPLING PLAN FOR INCOMING INSPECTION SHALL FOLLOW MIL-STD-105E.

- 2.1 LOT SIZE: QUANTITY PER SHIPMENT AS ONE LOT (DIFFERENT MODEL AS DIFFERENT LOT).
- 2.2 SAMPLING TYPE: NORMAL INSPECTION, SINGLE SAMPLING.
- 2.3 SAMPLING LEVEL: LEVEL II.
- 2.4 AQL: ACCEPTABLE QUALITY LEVEL

MAJOR DEFECT: AQL=0.65 MINOR DEFECT: AQL=1.0

3.PANEL INSPECTION CONDITION

3.1 ENVIRONMENT:

ROOM TEMPERATURE: 25±5°C.

HUMIDITY: 65±5% RH.

ILLUMINATION: 300 ~ 700 LUX.

3.2 INSPECTION DISTANCE:

35±5 CM

3.3 INSPECTION ANGLE:

THE VISION OF INSPECTOR SHOULD BE PERPENDICULAR TO THE SURFACE OF THE MODULE.

3.4 INSPECTION TIME:

PERCEPTIBILITY TEST TIME: 20 SECONDS MAX.

4. DISPLAY QUALITY

4.1 FUNCTION RELATED:

THE FUNCTION DEFECTS OF LINE DEFECT, ABNORMAL DISPLAY, AND NO DISPLAY ARE CONSIDERED MAJOR DEFECTS.

4.2 BRIGHT/DARK DOTS:

Defect Type	Specification	Major	Minor
Bright Dots	N≦2		•
Drak Dots	N≦3		•
Total Bright and Dark Dots	N≦4		•

Note: 1:

The definition of dot: The size of a defective dot over 1/2 of whole dot is regarded as one defective dot.

Bright dot: Dots appear bright and unchanged in size in which LCD panel is displaying under black pattern.

The bright dot defect must be visible through 2% ND filter

Dark dot: Dots appear dark and unchanged in size in which LCD panel is displaying under pure red, green, blue pattern.

4.3 PIXEL DEFINITION:

R	G	В	R	G	В	R	G	В	Dot Defect
R	G	В	R	G	В	R	G	В	Adjacent Dot Defect
R	G	В	R	G	В	R	G	В	Cluster

Note 1:

If pixel or partial sub-pixel defects exceed 50% of the affected pixel or sub-pixel area, it shall be considered as 1 defect.

Note 2:

There should be no distinct non-uniformity visible through 2% ND Filter within 2 sec inspection times.

4.4Visual Inspection specifications:

De	efect Type	Specification Size	Count (N)	Major	Minor
	Oot shape	D≤0.1mm	Ignored		
,	cratch and Bubbles in splay area)	0.1mm <d≤0.25mm< td=""><td>N≤3</td><td></td><td>•</td></d≤0.25mm<>	N≤3		•
		D>0.25mm	N=0		
N to Div	(Out of our Towns I)	D≤70mm	N≤4		
Newton Ring	(Only for Touch panel)	D>70mm	N=0		•
TOD Fish Fire	· (Only for Toylob money)	0.1mm <d≤0.2mm< td=""><td>N≤4</td><td></td><td></td></d≤0.2mm<>	N≤4		
•	s (Only for Touch panel) ubble/Dent)	0.2mm <d≤0.3mm< td=""><td>N≤3</td><td></td><td>•</td></d≤0.3mm<>	N≤3		•
(2)	abbio, Bonty	0.3mm <d≤0.4mm< td=""><td>N≤2</td><td></td><td></td></d≤0.4mm<>	N≤2		
	ine shape	W≤0.01mm	Ignored		
	ratch、Lint and Bubbles display area)	0.01 mm $<$ W \leqslant 0.05 mm $, and L\leqslant3mm$	N≤3		•
L _n		W>0.05mm,or L>3mm	N=0		
Bubble ir	cell (active area)	It should be found by eyes			•
	Scratch	No harm		•	
Bezel	Dirt	No harm		•	
Bozon	Wrap	No harm		•	
	Sunken	No harm			•
	No label	No			•
	Inverted label	No		•	
	Broken	No		•	
Label	Dirt	Word can be read		•	
Label	Not clear	No		•	
	Word out of shape	No		•	
	Mistake	No		•	
	Position	Be attached on right position		•	
Screw	Not enough	No		•	
OCIEW	Limp	No		•	
Connector	Connection status	No bend on PINs and damage		•	
FPC/FFC	Broken	No		•	

Note: Extraneous substance and scratch not affecting the display of image, for instance, extraneous substance under polarizer film but outside the display area, or scratch on metal bezel and backlight module or polarizer film outside the display area, shall not be considered as defective or non-conforming.